

Norfoam Door Maintenance Guidelines

It is recommended the all doors are inspected on a regular basis based on the usage of the doors.

Inspection Guideline

1. Conduct visual inspection of door noting any damage to door, head track, rollers, stops, guides, hinges and gaskets.
2. Move door through its full range of movement noting any points that movement is restricted.
3. Check that Emergency Bell operates correctly.
4. Check that Emergency Exit mechanism is unobstructed and can be undone without excessive force
5. Check that Roller catch on swing doors open and closes smoothly
6. Electrical testing of heaters should be carried out by a qualified electrician.

Remedial Action

1. Replace any worn or damaged head track, rollers, stops guides or gaskets.
2. Replace worn head track, adjust guides or replace as required.
3. Replace Emergency Bell
4. Clear any obstructions, adjust tension or replace as required.
5. Oil plastic rollers as required
6. Replace door heater components.

If you have other maintenance issues regarding Norfoam Sliding or Swing doors, please contact our office.